


#7348 Dellorto Jet Doctor

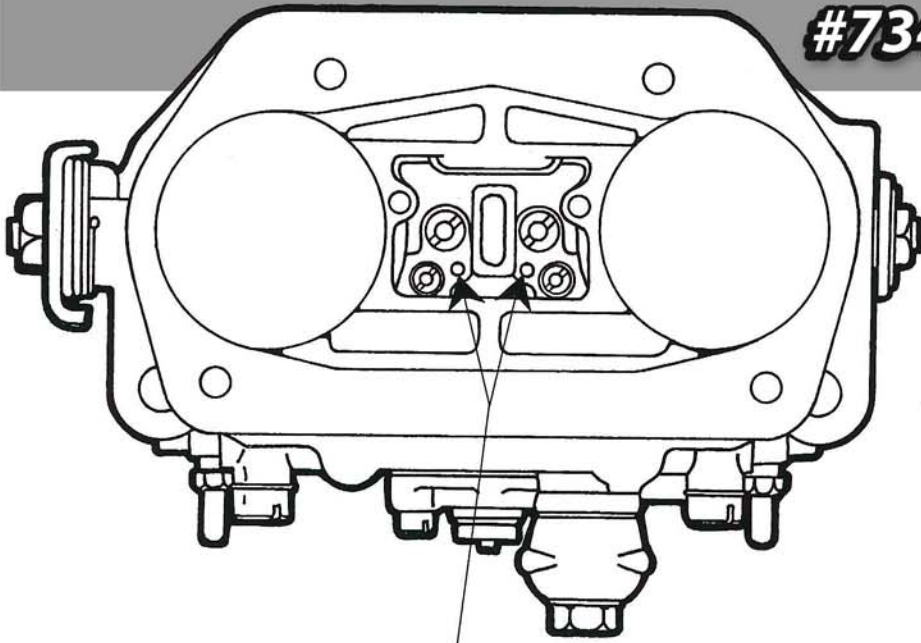

After installation we suggest you take a spark plug reading to be sure your jetting is correct. Jet sizes vary with engine displacement, Ask your CB Sales Rep. for advice.

Install the supplied lead plugs in these two holes. Only one plug is necessary for each hole. Secure the plug so that it is flush with the top of the hole.

CB
PERFORMANCE

Phone: 559-733-8222
Fax: 559-733-7967
Toll Free: 1-800-274-8337

cbperformance.com